



Overview

Qorvo's PAC55724EVK1 development platform is a complete hardware solution enabling users not only to evaluate the PAC55724 device, but also develop power applications revolving around this powerful and versatile ARM® Cortex®-M4F based microcontroller. The module contains a PAC55724 Power Application Controller® (MCU) and all the necessary circuitry to properly energize the MCU and its internal peripherals once power is applied.

To aid in the application development the PAC55724EVK1 offers access to each and every one of the PAC55724 device's signals by means of a series of male header connectors.

The PAC55724EVK1 also contains access to an external USB to UART module enabling users to connect the evaluation module to a PC computer through a conventional Virtual Comm Port which can then be used in the communication efforts by taking advantage of the PAC55724's UART interface. Graphical User Interface (GUI) software suites can be employed to externally control particular application features.

Finally, the PAC55724EVK1 module gives access to the PAC55724's SWD and JTAG ports allowing users to both program the application into the device's FLASH memory, as well as debug the application in real time. The provided 4 pin connector is compatible with a decent variety of SWD based debugger/programmer modules, widely available. In parallel, a MIPI20 connector is made available to provide JTAG with TRACE functionality, greatly expanding the existent debugging capabilities.

Qorvo's PAC55724EVK1 evaluation kit consists of the following:

- PAC55724EVK1 module
- ET-UARTSWD module with all cable assemblies
- PAC55724EVK1 User's Guide
- Schematics, BOM and Layout Drawings

Note: External SWD debugger/programming module required and to be provided by user.

PAC55724EVK1 Evaluation Module

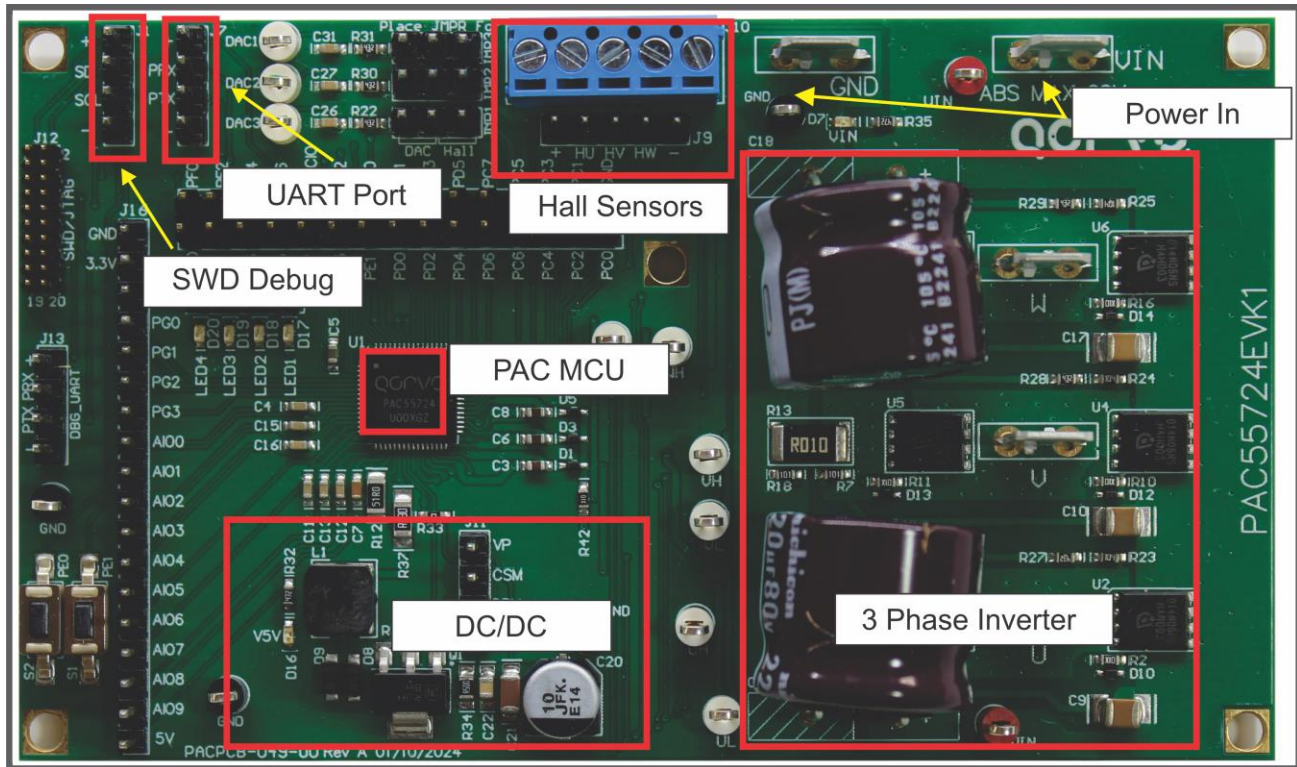


Figure 1: PAC55724EVK1 Block Diagram

Solution Benefits:

- Ideal for high voltage (up to 60V Abs Max) general purpose power applications and controllers
- Single-IC PAC55724 with configurable PWM outputs, ADC inputs, I2C, UART, SPI communication ports and GPIO.
- Gate driving for up to three half H Bridge (tri phase) inverter.
- Schematics, BOM, Layout drawings available

The following sections provide information about the hardware features of Qorvo's PAC55724EVK1 turnkey solution.

Pinout and Signal Connectivity

Pinout diagram for the TMS320C6748 evaluation board. The diagram shows four connectors: J1, J7, J8, and J9.

J1 (4 pins):

- Pin 1: + SD
- Pin 2: CL
- Pin 3: -
- Pin 4: -

J7 (4 pins):

- Pin 1: + PRX
- Pin 2: PTX
- Pin 3: -
- Pin 4: -

J8 (20 pins):

- Pin 1: GND
- Pin 2: PC1
- Pin 3: PC3
- Pin 4: PC5
- Pin 5: PC7
- Pin 6: PD5
- Pin 7: PD3
- Pin 8: PD1
- Pin 9: PE0
- Pin 10: PE2
- Pin 11: VCCIO
- Pin 12: PF6
- Pin 13: PF4
- Pin 14: PF2
- Pin 15: PF0
- Pin 16: PC0
- Pin 17: PC2
- Pin 18: PC4
- Pin 19: PC6
- Pin 20: PD6

J9 (18 pins):

- Pin 1: GND
- Pin 2: V3P3
- Pin 3: GND
- Pin 4: PG0
- Pin 5: PG1
- Pin 6: PG2
- Pin 7: PG3
- Pin 8: AIO0
- Pin 9: AIO1
- Pin 10: AIO2
- Pin 11: AIO3
- Pin 12: AIO4
- Pin 13: AIO5
- Pin 14: AIO6
- Pin 15: AIO7
- Pin 16: AIO8
- Pin 17: AIO9
- Pin 18: 5V

J11 (4 pins):

- Pin 1: VP
- Pin 2: CSM
- Pin 3: DRM
- Pin 4: GND

2024-11-03 v1.0
www.gorvo.com



PAC55724EVK1

PAC55724EVK1 Evaluation Module User's Guide

Power Input

Power to the PAC55724EVK1 evaluation module can be applied to the VIN and GND spade connectors. Power to the PAC55724EVK1 evaluation module should not exceed 60V (Abs Max).

The PAC55724EVK1 is optimized to operate with voltages ranging from 14V to 36V Nominal (60V Abs Max). When the VIN input voltage goes above 8V, the system exits UVLO protection and all subsystems, including voltage regulators, analog front end and microcontroller, are enabled.

LED's

When an operational voltage is applied, LED D16 will light up. This is the LED which notifies VSYS (5V) rail is up and running. VP (12V gate drive), 3.3V (for analog circuitry) and 1.2V (for CPU core) regulators will also be operating at this point in time. Module is ready for use.

The following table shows the available LEDs and their associated diagnostic function.

LED	Description
D16	VSYS (5V). Light up when the PAC55724 device is successfully powered up by VIN.
D7	VIN. Lights up as VIN voltage is applied.



PAC55724EVK1

PAC55724EVK1 Evaluation Module User's Guide

SWD Debugging

Connector J1 offers access to the PAC55724 SWD port lines.

J1 Pin	Terminal	Description
1	+	VCCIO (3.3V)
2	SD	SWD Serial Data (PF1)
3	CL	SWD Serial Clock (PF0)
4	-	GND (System Ground)

JTAG Debugging

Connector J12 is a standard MIPI20 offering access to the JTAG port as well as single data line TRACE debug.

J12 Pins	Terminal	Description
1	VCC	VCC Power
2	SWDIO/TMS	Serial Wire Debug Data Input Output / JTAG Test Mode Select
3	GND	GND (System GND)
4	SWCLK/TCK	Serial Wire Debug Clock / JTAG Clock
5	GND	GND (System GND)
6	SWO/TDO	Serial Wire Debug Output / JTAG Data Output
7	NC	Not Connected
8	TDI	JTAG Data Input
9	GND	GND (System GND)
10	NC	Not Connected
11	GND	GND (System GND)
12	TRACE CLK	ETM Trace Clock
13	GND	GND (System GND)
14	TRACE DATA 0	ETM Trace Data 0
15	GND	GND (System GND)
16	NC	Not Connected
17	GND	GND (System GND)
18	NC	Not Connected
19	GND	GND (System GND)
20	NC	Not Connected



PAC55724EVK1

PAC55724EVK1 Evaluation Module User's Guide

Serial Communications

Connector J7 offers access to the PAC55724 UART port lines.

J7 Pin	Terminal	Description
1	+	VCCIO (3.3V)
2	TX	MCU Transmit Line (PE2)
3	RX	MCU Receive Line (PE3)
4	-	GND (System Ground)

Alternate Serial Communications

When enabled (R41 must be populated with a 0 Ohm resistor), connector J13 provides access to a secondary UART port lines.

J7 Pin	Terminal	Description
1	+	VCCIO (3.3V)
2	TX	MCU Transmit Line (PF2 – requires 0 ohm resistor R41 to be populated)
3	RX	MCU Receive Line (PF3)
4	-	GND (System Ground)

Hall Sensor / DAC Interface

Connector J10 offers access to the PAC55724 resources on PORTC utilized for hall sensor based commutation. These resources can be alternatively utilized as PWM DAC outputs for in real time debugging. Jumpers JMP1/2/3 are used to select the preferred function.

NOTE: 2 pin shunts must be placed on the JMP1/2/3 in order for the respective PORTC resources to be made available.

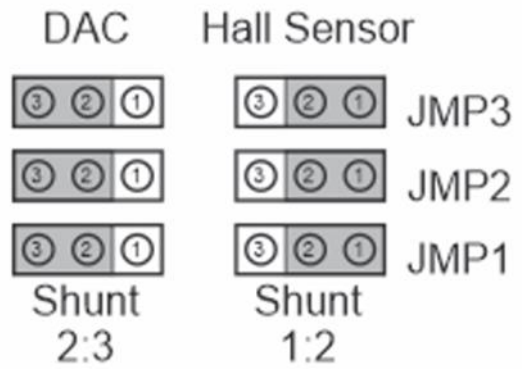


Figure 3 DAC / Hall Sensor Jumper Selection

Jumper JMP1/2/3	Description
1:2	Hall Sensor Functionality
2:3	DAC Functionality

J10 Pin	Terminal	Description
1	+	VCCIO (3.3V)
2	Hall Sensor U	PORTC4
3	Hall Sensor V	PORTC5
4	Hall Sensor W	PORTC6
5	GND	GND (System Ground)

NOTE: J10 functionality is only available when jumpers JMP1/2/3 have been shunted on the Hall Sensor respective position.



PAC55724EVK1

PAC55724EVK1 Evaluation Module User's Guide

Test Stake	Description
DAC 1	PORTC4
DAC 2	PORTC5
DAC 3	PORTC6

NOTE: Test stakes DAC1/2/3 are only available when jumpers JMP1/2/3 have been shunted on the DAC respective position

PAC55724EVK1 Setup

The setup for the PAC55724EVK1 evaluation module requires up to four simple connections.

1. Connect the VIN power source via spade tab connectors VIN and GND. As VIN power is applied, the LED D7 will light up. Once VIN voltage goes above 8V, the PAC55724's Multi Mode Power Manager will be engaged and the VSYS (5V) regulator will be enabled. This event will result in LED D16 lighting up.
2. Connect the 3 Phase BLDC/PMSM motor via space tab connectors PHASE U, PHASE V and PHASE W.
3. If Serial Communications are desired, connect the USB to UART module 4 pin connection to J7.
4. For debugging/programming, connect a suitable USB SWD module to J1 by using a standard 4 wire cable.



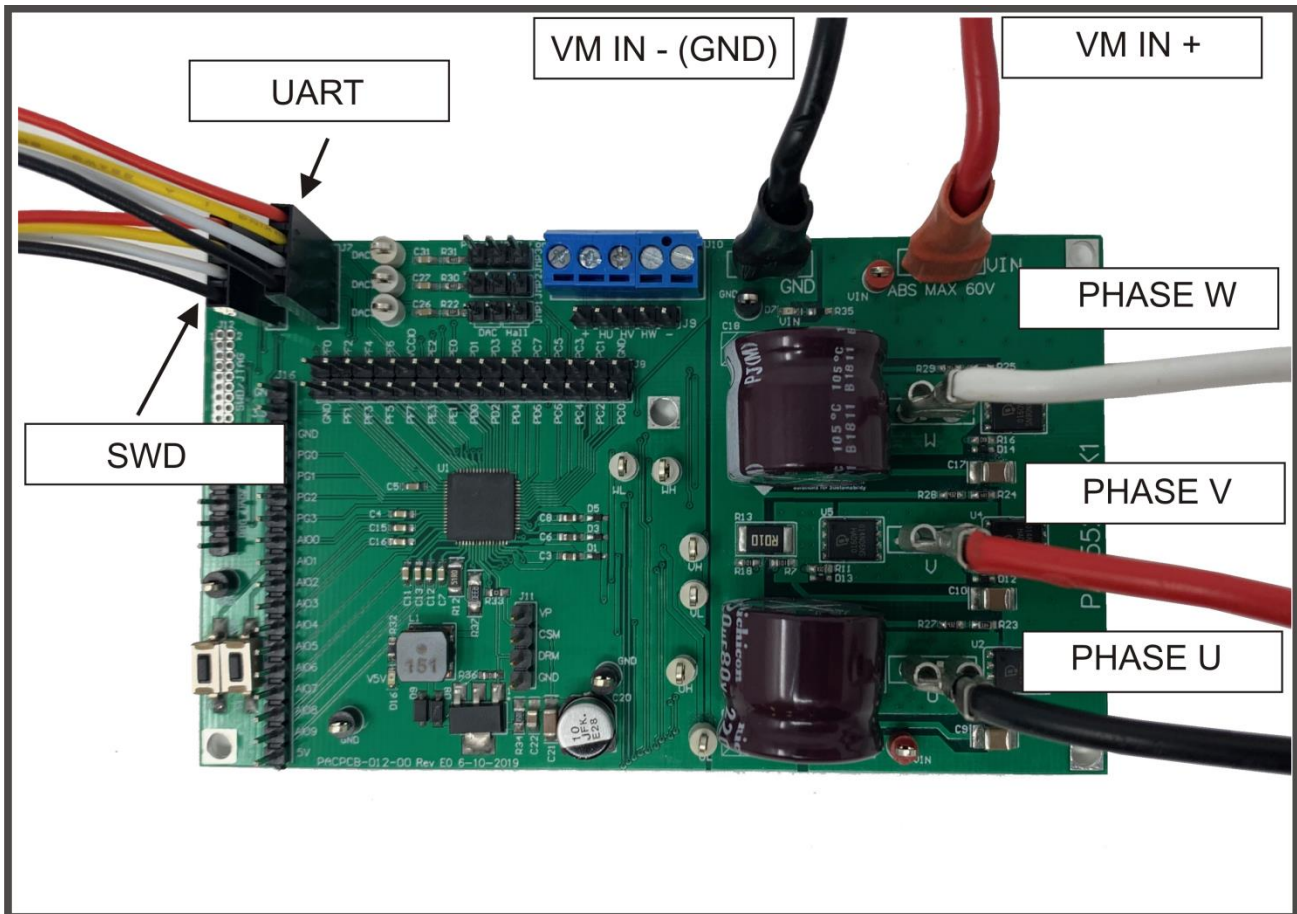


Figure 4: PAC55724EVK1 Evaluation Module Connections

TYPICAL PAC5xxxEVK1 SETUP

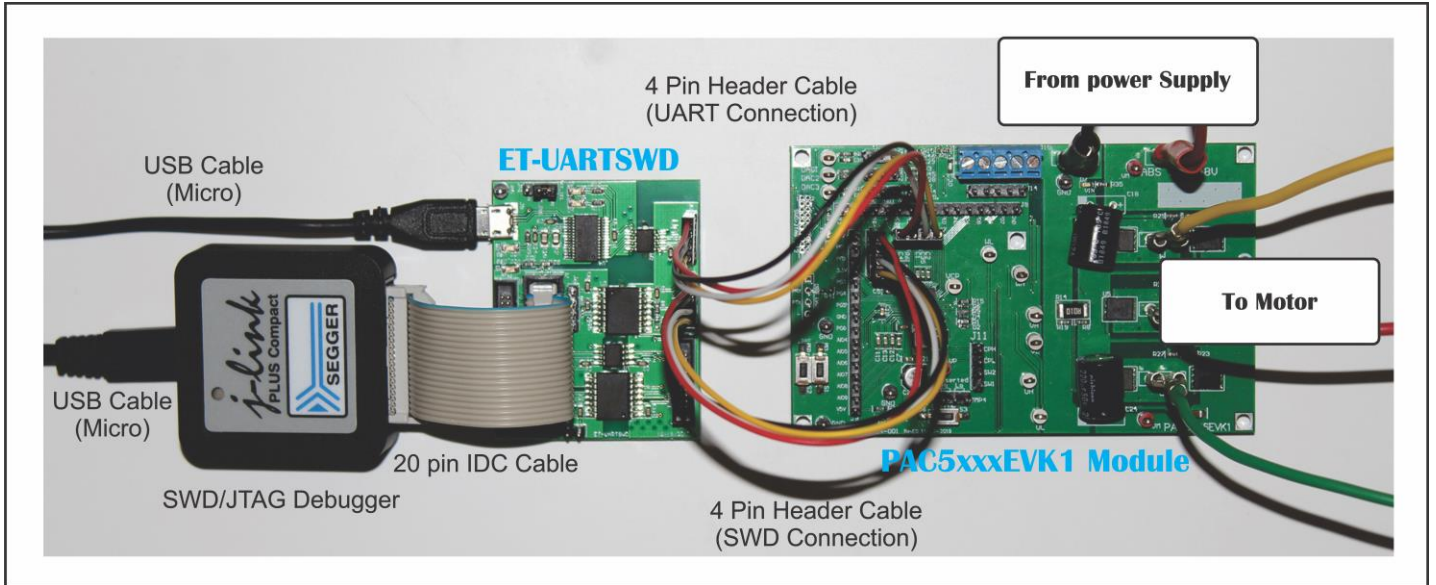

PAC5xxxEVK1 INCLUDED COMPONENTS

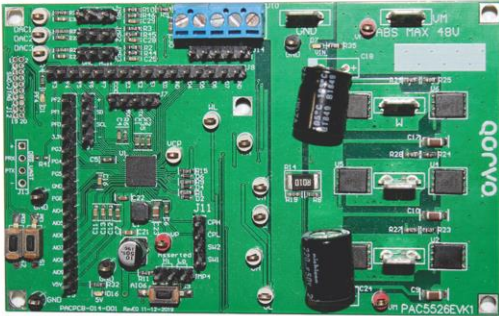

X1

PAC5xxxEVK1 Module



X1

ET-UARTSWD Module



X2

4 pin header cable



X1

USB Cable



PAC55724EVK1

PAC55724EVK1 Evaluation Module User's Guide

REVISION HISTORY

Revision	Description
Rev 1.0	Initial Release

Contact Information

For the latest specifications, additional product information, worldwide sales and distribution locations:

Web: www.qorvo.com

Tel: 1-844-890-8163

Email: customer.support@qorvo.com

Important Notice

The information contained herein is believed to be reliable; however, Qorvo makes no warranties regarding the information contained herein and assumes no responsibility or liability whatsoever for the use of the information contained herein. All information contained herein is subject to change without notice. Customers should obtain and verify the latest relevant information before placing orders for Qorvo products. The information contained herein or any use of such information does not grant, explicitly or implicitly, to any party any patent rights, licenses, or any other intellectual property rights, whether with regard to such information itself or anything described by such information. **THIS INFORMATION DOES NOT CONSTITUTE A WARRANTY WITH RESPECT TO THE PRODUCTS DESCRIBED HEREIN, AND QORVO HEREBY DISCLAIMS ANY AND ALL WARRANTIES WITH RESPECT TO SUCH PRODUCTS WHETHER EXPRESS OR IMPLIED BY LAW, COURSE OF DEALING, COURSE OF PERFORMANCE, USAGE OF TRADE OR OTHERWISE, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.**

Without limiting the generality of the foregoing, Qorvo products are not warranted or authorized for use as critical components in medical, life-saving, or life-sustaining applications, or other applications where a failure would reasonably be expected to cause severe personal injury or death.

Copyright 2024 © Qorvo, Inc. | Qorvo is a registered trademark of Qorvo, Inc.